

NEWMAR[®]

A MISSION CRITICAL ELECTRONICS BRAND

Owners Manual

FDP-1010-48N

Rack Mount GMT Fuse Panel

M-FDP-1010-48N 051123

MCE NETWORK & INDUSTRIAL POWER



DuraComm[®]

NEWMAR



© Newmar Power Supplies. The information contained herein is subject to change without notice. Newmar shall not be liable for technical or editorial errors or omissions contained herein. All rights reserved.

Table Of Contents

Table Of Contents	1
Important Safety Instructions	2
Product Overview.....	3
FDP-1010-48N Description.....	3
Installation	3
Negative Units	3
Maintenance	4
Conductor Pre-treatment.....	4
RECOMMENDED COPPER WIRE SIZE FOR CURRENT CAPACITY	4
LIMITED WARRANTY	5
Contact Us.....	6

- Dual Bus 100 Amps Max
- Up to 10 Fusesper bus
- Red / Green LED light that indicate power and alarm activity
- Form C Relay contacts are isolated for remote fuse fail indication
- 15 Amps max per position on output screws
- Requires GMT visual spring indicating fuses (not included)



Models	FDP-1010-48N
Input Voltage, VDC	-40 to -60
Input Current	75 Amps Max per bus, Max 150 Amps
Output Amperage	15 Amps Max per Position, 10 positions per bus
Dimensions (LxWxH) Product	10.5 x 19 x 1.75 inches
Dimensions (LxWxH) Shipping	15 x 21 x 8 inches
WEIGHT, Shipping	9 lbs.

*NOTE: Specifications are subject to change without notice

Important Safety Instructions

The individual user should take care to determine, prior to use or installation, whether this device is suitable, adequate, or safe for the use intended. Since individual applications are subject to great variation, Newmar makes no representation or warranty as to the merchantability, suitability, or fitness of these units for any specific application.

DO NOT block any of the cooling vents on the sides and always allow adequate ventilation by not installing the unit inside tightly closed spaces. Physical mounting position is not critical, but the cooling vents must not be blocked.

Failures require investigation as to cause and/or repair of the unit.

**There Are No User Serviceable Parts Inside.
Service And Repair Must Be Referred to Qualified Factory Personnel.**

Product Overview

DP-20GMT Series Fuse Panel provides two green LEDs, and each one indicates power supply status for a bank of ten load circuits. When any fuse fails, a red LED is turned on to indicate the condition and allow technicians to quickly find the panel with the failed fuse. Form C relay contacts, which are isolated from the frame and power circuits, indicate when there is a fuse failure by providing normally open and normally closed contacts to activate remote alarm or monitoring systems. These contacts are available via a rear-panel barrier strip.

Fuses and LED status indicators are on the front of the unit, while input, output, and alarm connections are on the rear.


FDP-1010-48N Description

The FDP-1010-48N Fuse Panel is a rack mount (1U) 100 Amp -48 VDC power distribution panel that provides up to 10 load circuits via two buses protected by individual GMT series fuses (fuses not included) in the negative lead for positive ground installations. Each circuit can be fused up to 15 Amps, with a total 10-circuit load of 100 Amps maximum. Heavy duty DC input connectors provide strong ¼ inch studs to accept up to 100 amps at -48 VDC from a single power supply. This product is designed for -48 VDC positive ground systems, however, all inputs and outputs are isolated from the frame.

See [Newmar](#) for more information.

Installation

Negative Units

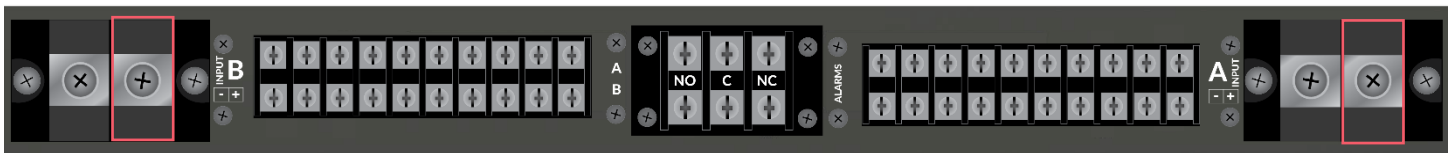

1. For each bus, connect the Power Supply Positive to the red terminal labeled, "Input Positive (+) return".
2. For each bus, connect the Power Supply Negative to the black terminal labeled, "Input Negative (-) source".
3. For each bus, connect your Load to the Screw Terminals (1~ 10), Positive (+) on Upper Terminals, Negative (-) to Lower Terminals.
4. For each bus, the alarm contacts can be wired for Normally Closed or Normally Open operation.

Maintenance

Conductor Pre-treatment

All kinds of copper conductors can be clamped without treatment. DO NOT solder tin stranded conductors. The solder yields and fractures under high pressure. The result is increased contact resistance and excessive temperature rise. Additionally, corrosion has been observed due to the fluxes. Notch fractures at the transition from the rigid tinned part to the flexible conductors are also possible. Ferrules can be used as a protection when wiring stranded conductors. Copper ferrules prevent the current transfer from being influenced by dissimilar metals and remove the risk of corrosion. Always use the correct tool to crimp the ferrule.

RECOMMENDED COPPER WIRE SIZE FOR CURRENT CAPACITY

(Insulated Wire, Single Conductor in free air)

Current Level in Amperes	Wire Size Requirements <i>According to MIL-W-5088B</i>	
	Up to 5 Feet	Up to 10 Feet
<7 AMPERES	20 AWG	18 AWG
14 AMPERES	18 AWG	16 AWG
20 AMPERES	16 AWG	14 AWG
30 AMPERES	14 AWG	12 AWG
40 AMPERES	12 AWG	10 AWG
50 AMPERES	10 AWG	8 AWG
70 AMPERES	8 AWG	6 AWG
100 AMPERES	6 AWG	4 AWG

LIMITED WARRANTY

Newmar warrants to the initial end user, each power supply manufactured by Newmar to be free from defects in material and workmanship when in normal use and service for a period of three years from the date of purchase from an authorized Newmar dealer.

Should a product manufactured by Newmar fail or malfunction due to manufacturing defect, or faulty component, Newmar, at its option, will repair or replace the faulty product or parts thereof, which, after examination by Newmar, prove to be defective or not operational according to specifications in effect at the time of sale to the initial end user. The product that is replaced or repaired under the provisions of this warranty will be warranted for the remainder of the original warranty period, only, and will not extend into a new three-year warranty period.

The limited warranty does not extend to any Newmar product which has been subject to misuse, accidental damage, neglect, incorrect wiring not associated with manufacture, improper charging voltages, or any product which has had the serial number removed, altered, defaced, or changed in any way. Newmar reserves the right to change, alter, or improve the specifications of its products at any time, and by so doing, incurs no obligation to install or retrofit any such changes or improvements in or on products manufactured prior to inclusion of such changes.

Newmar requires any product needing in or out of warranty service to be returned to Newmar. All requests for warranty service must be accompanied by proof of purchase, such as bill of sale with purchase date identified. Newmar is not responsible for any expenses or payments incurred for the removal of the product from its place of use, transportation, or shipping expenses to the place of repair, or return expenses of a repaired or replacement product to its place of use.

The implied warranties that the law imposes on the sale of this product are expressly LIMITED, in duration, to the three (3) year time period specified herein. Newmar will not be liable for damages, consequential or otherwise, resulting from the use and operation of this product, or from the breach of this LIMITED WARRANTY. Some states do not allow limitations on the duration of the implied warranty or exclusions or limitations of incidental or consequential damages, so said limitations or exclusions may not apply to you. This warranty gives you specific legal rights which vary from state to state. This warranty is given in lieu of all other warranties, whether expressed, implied, or by law. All other warranties, including WITHOUT LIMITATION, warranties of merchantability and fitness or suitability for a particular purpose, are specifically excluded. Newmar reserves the right to change or modify its warranty and service programs without prior notice.

Contact Us

Location

1580 Sunflower Ave
Costa Mesa, CA. 92626

Phone

714.751.0488
1.800.854.3906

Fax

714.896.9679

Email

Email purchase orders to
orders@newmarpower.com